

Units 12/13 Southpoint Business Park n SO31 4R I. (0) 2380 98703 (Fax: (0) 2380 98703 9

Manual **Climate Meter**

PCE-444



1. Safety

Read the following safety information carefully before attempting to operate or service the meter. Use the meter only as specified in this manual; otherwise, the protection provided by the meter

may be impaired.

▲ Environment conditions:

- 1. $RH \le 90RH\%$ (Non-condensation)
- 2. Operating temperature: -20° C $\sim 60^{\circ}$ C/ -4° F $\sim 140^{\circ}$ F
- ▲ Maintenance
 - 1. Repairs or servicing not covered in this manual should only be performed by qualified personnel.
 - 2. Wipe the unit with a dry soft cloth periodically. Do not use abrasives or solvents on this instrument.
- ▲ Safety symbol:

CE Comply with EMC

2. Introduction

The Humidity & Temperature Meter is designed with a high accuracy humidity & temperature sensor, providing high accuracy, fast response and stable readings. It is widely used for monitoring and collecting data of environment temperature and humidity. This meter is widely used for measurement of temperature and humidity of room, metro, library, commercial center, communication center room, etc.

3. Features

- > Imported high accuracy humidity &temperature sensor ,high accuracy, fast response
- Color LCD display with backlight ≻
- ≻ Temperature unit selection: °C/°F
- ≻ MAX/MIN
- HOLD ≻
- Dew point temperature \geq
- ≻ Wet bulb temperature
- Enable/Disable auto power off \geq
- ≻ Over range indication
- \triangleright Low battery indication

4. Basic Operation

1. Open battery cover and install 3*1.5V AAA batteries in the battery compartment.

2.Power on: press "to power on, the meter conducts self-inspection, after LCD displays, it

measures temperature and humidity automatically.

3.After testing, press", to turn off the meter.

Note: Remove the battery when the meter is to be stored for long periods of time to avoid battery leakage.

5. Specification


Humidity	Range: 0~ 100%RH			
	Range	Accuracy	Resolution	
	45~75RH%	±3.0 RH%	0.1	
	Others	±4.5 RH%		
Temperature	Range	Accuracy	Resolution	
	-20°C~70°C/-4°F~158°F	±1.0°C/±1.8°F	0.1	
Dew point temp.	20°C~70°C /-4°F~158°F	$\pm 1.5^{\circ}C/\pm 2.7^{\circ}F$	0.1	
	Remark: Accuracy is based on environment condition of 25° ; 40 RH% ~100 RH%			
Wet bulb temp.	20°C~70°C/-4°F~158°F	$\pm 1.5^{\circ}C/\pm 2.7^{\circ}F$	0.1	
Data update	0.5S			
Enable/disable	The meter shuts off automatically after 15 minutes inactivity under auto			
auto power off	power off mode, disable auto power off is available			
Operating conditions	-20°C~60°C/-4°F~140°F,10 RH%~90 RH%			
Storage conditions	-20°C ~60°C/-4°F ~140°F,10 RH% ~75 RH%			
Power supply	3*1.5V "AAA" batteries			
Battery life	at least 50 hours			
Dimensions	168*56*30.5mm			
Weight	75g			

6. Meter description

- ①. Temperature and humidity sensor
- ②. Color LCD display
- ③. Hold button
- 4. Power on/off button
- ⑤. MAX/MIN button
- 6. Mode selection button
- ⑦. Battery cover
- (8). Nameplate

7. LCD display description

- ①. Data hold Icon
- ②. Auto power off Icon
- ③. Temperature reading
- 4. Dew point temperature units icon
- ⑤. Wet bulb temperature units icon
- 6. Humidity reading
- ⑦. Humidity unit icon
- 8. Temperature unit icon
- 9. low battery Icon
- 10. MAX/MIN

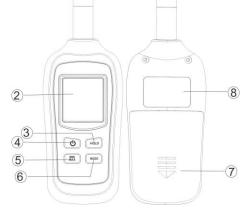



8. Operation instruction

8.1 D power on/off; press "D","to turn on/off the meter.
8.2 Data hold; In the measuring mode, press.
LCD, which indicates the data is freezed. To release the held r
8.3 MAX/MIN ; In the measuring mode, press"
the captured maximum readings will be displayed on the LCD,
appear on the LCD and the captured minimum readings will
press" , the meter exit MAX/MIN measurement mode an
8.4 (MODE) key; with the meter on, press.
temperature and wet bulb temperature in turn.
8.5 Use of compound key;
8.5.1 With the meter off, press" (HOLD)", first and hold, then pr
it can change temperature unit(°C/°F), $\ ^{\circ}C$ is preset.
8.5.2 With the meter off, press "first and hold, then pr
" \bigcirc "icon on the LCD display disappear, which indicates the po
need to turn off the meter through pressing "
Note: When"O" icon displayed on the screen, it indicates that
off after approx. 15 minutes of inactivity.
9. Notes
1. This meter has already been calibrated before delivery. Do no
without professional personnel and device.
(Note) The unit has been calibrated before delivery. The
one year.
2. Repairs or servicing not covered in this manual should personnel.
3. Wipe the unit with a dry soft cloth periodically. Do not

instrument.

4. Remove the battery when the meter is to be stored for long periods of time to avoid battery leakage.

5. When the battery is low.LCD display " , a new battery is needed.

10. Accessories

- 1. User's manual
- 2. 1.5V AAA Battery

, "HOLD"Icon will appear on the reading, press"HOLD" again.

"MAX" will appear on the LCD,
press" again, "MIN" will
l be displayed on the LCD. Long
nd back to normal measuring mode.
can select temperature, dew point

press" , to power on the meter, press" , to power on the meter,

at the meter will automatically turn

not revise the calibration parameters e recommended calibration period is d only be performed by qualified of use abrasives or solvent on this ng periods of time to avoid battery ry is needed.